



Shenzhen Xtooltech Co., Ltd

VOLVO Function List V6.91

Tips and Instructions:

- * This feature is new.
- √ This feature is supported.
- This feature is not supported.
- ※ This feature is partially supported.

Vehicle	System	Read ECU Information	Read Trouble Code	Clear Trouble Code	Live Data
Truck	EBS(Electronic Braking System)	√	√	√	√
Truck	EMS(Engine Management System)	√	√	√	√
Truck	TECU(Automatic Transmission)	√	√	√	√
Truck	ACM(Exhaust Gas After-treatment)	√	√	√	√
Truck	BBM(Bodywork Builder Module)	√	√	√	√
Truck	CIOM(Cab I/O Module)	√	√	√	√
Truck	IC(Instrument Cluster)	√	√	√	√
Truck	Front Suspensions(CCIOM Control)	√	√	√	√
Truck	Rear Suspensions(RCIOM Control)	√	√	√	√
Truck	FCIOM(Front Chassis I/O Module)	√	√	√	√
Truck	APM(Air Pressure Management)	√	√	√	√
Truck	VMCU(Vehicle Master Control Unit)	√	√	√	√
Truck	ABS(Antilock Brake System)	√	√	√	√
Truck	FAS(Front Axle Steering)	√	√	√	√
Truck	TGW(Telematics GateWay)	√	√	√	√
Truck	DACU(Driver Assistance Control)	√	√	√	√

Truck	LPOS(Lane Position and Object	√	√	√	√
Truck	FLS(Forward Looking Sensor)	√	√	√	√
Truck	HMI IOM(Human-Machine Interface	√	√	√	√
Truck	SID(Secondary Information Disp	√	√	√	√
Truck	Audio(Audio)	√	√	√	√
Truck	CCM(Climate Control Module)	√	√	√	√
Truck	PDM(Passenger Door Module)	√	√	√	√
Truck	DDM(Driver Door Module)	√	√	√	√
Truck	LECM1(Living Environment Conti	√	√	√	√
Truck	Alarm(Alarm ECU)	√	√	√	√
Truck	DTACHO(Digital Tacho DTCO)	√	√	√	√
Truck	BLECU(Bending Light ECU)	√	√	√	√

XTOOL