



Shenzhen Xtooltech Co., Ltd

IVECO Function List V6.63

Tips and Instructions:

- * This feature is new.
- √ This feature is supported.
- This feature is not supported.
- ※ This feature is partially supported.

System	Read ECU Information	Read Trouble Code	Clear Trouble Code	Live Data	Actuation Test	Special Functions
EDC 16 BOSCH	√	√	√	√		
EDC16C39.5	√	√	√	√		
EDC MS6.3 BOSCH	√	√	√	√		
ABS8/ASR8/ESP8 BOSCH	√	√	√	√		
EDC 7 BOSCH	√	√	√	√	1.Compression test 2.Coolant indicator 3.Cylinder cut-off 4.Delete errors 5.Diesel filter heating relay 6.EDC lamp 7.Engine brake lamp 8.Engine brake solenoid valve 9.Glow plug pre-heat indicator 10.Glow plug relay 11.Oil pressure indicator 12.Oil pressure indicator 13.Speed limit lamp	
ABS 2X Knorr-BOSCH	√	√	√	√		
ECAS Eurocargo Restyling	√	√	√	√		
IBC Eurocargo New	√	√	√	√		
IC Eurocargo New	√	√	√	√	1.PTO(power take off) 2.Left turn indicator 3.Right turn signal 4.Warning lights 5.PTO(power take off) 6.Front transverse differential lock warning light 7.Longitudinal differential lock(semi- file group)warning lights 8.After transverse differential lock warning light 9.Odometer test 10.All indicator lights have been activated etc.	
EDC MS6.2 BOSCH VER 1	√	√	√	√	1. Intake air preheating relay 2. Engine brake 3. Boost pressure solenoid valve	
EDC MS6.2 BOSCH VER 2	√	√	√	√	1. Intake air preheating relay 2. Engine brake 3. Boost pressure solenoid valve 4. Intake air preheating indicator 5. The engine control fault light	
DeNoxtronic 2	√	√	√	√		
VCM-anti-theft system	√	√	√	√		

Extension module	√	√	√	√		
IVECO body controller	√	√	√	√	1. Cab light button 2. Front width indicator 3. Entry lights 4. Entry lights(cab is low)/in-cab white lights(cab is high) 5. Roof opened/close motor 6. Low-speed electric wiper 7. High-speed electric wiper 8. Windshield washer/windshield wiper 9. Headlight cleaner(available) 10. In-cab red lights(cab is high) 11. Reverse gear recommended by the body manufacturer(optional)	
Instrument cluster	√	√	√	√		
Allison can Gen 4	√	√	√	√		
Driver door module	√	√	√	√		
Passenger door module	√	√	√	√		
EBS WABCO	√	√	√	√		
EUROTRONIC 2	√	√	√	√		
Body computer	√	√	√	√	1. Swing lamp 1 2. Swing lamp 2 3. Stepping lighting 4. Front light for overall dimension 5. In-cab white light 6. Switch lighting 7. Front windshield heater relay 8. Electric wiper-low speed 9. Electric wiper-high speed 10. Sunroof opened/close motor 11. Pneumatic horn	
Front frame computer	√	√	√	√	1. Left turn indicator 2. Right turn indicator 3. Parking light, left 4. Parking light, right 5. Speaker 6. Fan(low speed) 7. Fan(high speed) 8. Dipped headlight(left) 9. Dipped headlight(right) 10. Main beam headlights(left) 11. Main beam headlights(right) 12. Assist lamp 13. Fog lights	
WABCO-IVTM	√	√	√	√		
Air heater	√	√	√	√		
EDC 7 UC31	√	√	√	√		
ABS D/E/E2	√	√	√	√		
Cab module	√			√	1. Red light 2. Headlight washer 3. Windshield washer 4. Up/down adjustment of curtain motor	

Rear frame computer	√	√	√	√	1.Trailer right dimension light 2.Trailer left dimension light 3.Trailer right indicator 4.Trailer left indicator 5.Hanging lights 6.Activate PTO at valve gearbox 7.Trailer reverse lights 8.T trailer rear fog lamps 9.Trailer stop brake lights 10.Rear fog lamps etc.
Body Computer 2	√	√	√	√	1.Front windshield heater relay 2.Electric wiper-low speed 3.Electric wiper-high speed 4.Sunroof opened/close motor 5.Pneumatic horn 6.Swing lamp 1 7.Swing lamp 2 8.Stepping lighting 9.Front light for overall dimension 10.In-cab white light 11.Switch lighting
Trakker chassis electronics module	√	√	√	√	
IC(instrument)TRAKKE R	√	√	√	√	1.Warning light for minor fault 2.Warning light for serious fault(stop) 3.Tachometer fault indicator 4.Left turn signal 5.Right turn signal 6.PT01 indicator light 7.PT02 indicator light 8.Front transverse differential lock warning light 9.Longitudinal differential lock (shunt)Warning 10.Rear transverse differential lock warning light 11.Downshift indicator etc.
ECAS UABCO CAN	√	√	√	√	
BOSCH EDC17CP F1C	√	√	√	√	